




Part No. 2350-0129

M0919 082809

MS Batwing, 3 in 1 Value Pack

Includes 5" Smoke Windshield, Smoke Wind Deflectors and Slim Style Trim.

1. Kit Contents

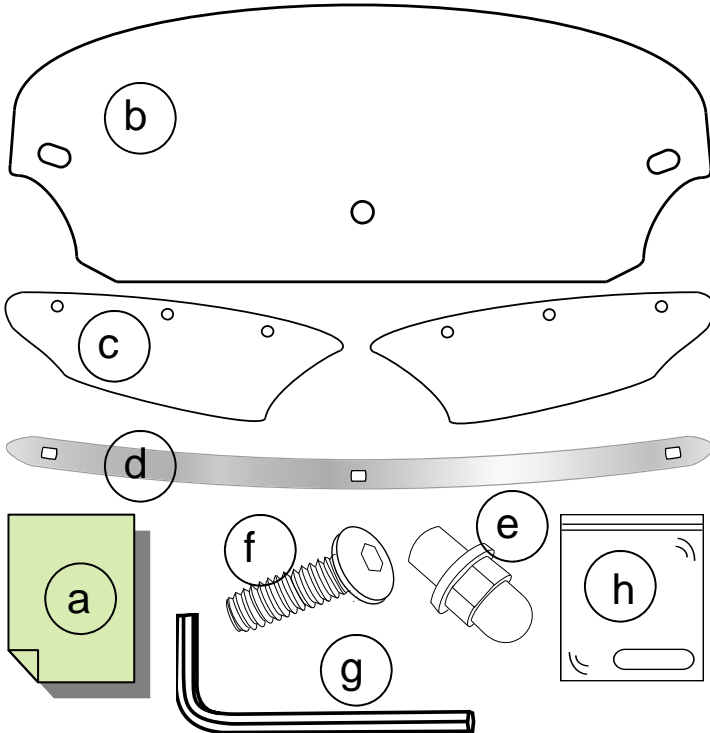

Re	Part #	Description	Qty
(a)	I0919	Mounting Instructions	1
(b)	M0921	MS Batwing Windshield, 5", Smoke	1
(c)	M0920	MS Batwing Wind Deflectors, Smoke	2
(d)	S1212	MS Batwing SS Trim, Slim Style	1
(e)	M997	Nylon Acorn Nut Shoulder Spacer	3
(f)	M972	1/4-20 7/8 SS Button Head Screw	3
(g)	M943	5/32" Short Arm Allen Wrench	1
(h)	K36	Wind Deflector Kit Bag	1

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.


For Parts and Warranty Help, Contact:

Memphis Shades, Inc.
P.O. Box 429
Rossville, TN 38066
(901) 853 0293


Visit us on the web at www.memphisshades.com or you can also reach us by email: customerservice@memphisshades.com

2. Mounting Instructions

1. Additional tools required, not included in this kit: 7/16" or 11mm wrench.
2. Align the Polished SS Trim, Slim Style over the center hole on the front of the fairing. Insert an SS Button Head Screw. Align the centre hole of the Windshield over the screw on the rear of the Fairing. Secure in place with an Acorn Nut Shoulder Spacer

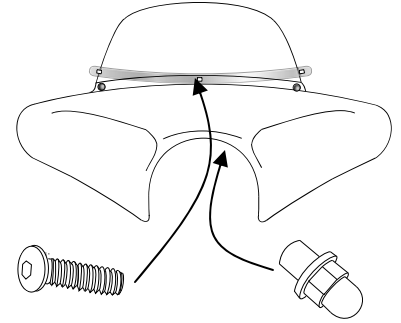

3. Align the Polished SS Trim, Slim Style over the left and right holes on the front of the fairing. Insert an SS Button Head Screw. Align the left and right holes of the Windshield over the screws on the rear of the Fairing. Secure in place with an Acorn Nut

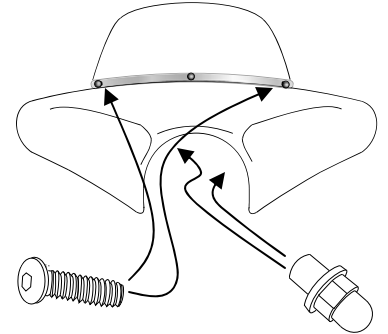

4. Remove the six holes plugs from the bottom edge of the Fairing.
5. Align the holes in the Wind Deflector with the holes in the Fairing. The Wind Deflectors are supplied as Right and Left units, and will only fit one side of the Fairing.
6. Starting at the center hole, push the bolt, with the washer, through the Fairing and through the Wind Deflector. Finger tighten the nut onto the bolt.
7. Secure the Wind Deflector with the remaining two bolts, and tighten down all nuts.
8. Fit the remaining Wind Deflector in the same way

