



Part No. 2350-0114

M7024 092308

**Tinted Fairing Wind Deflectors, Purple**  
Use with 2330-0016 and 2330-0017 MS  
Batwing Fairings

**Durable Lucite construction.**  
**Stylish and Functional**

Before assembly, read Warnings inside



## WARNING

1. During installation, make sure that the fairing and hardware do not interfere with any cables or wiring when the forks are turned all the way in either direction. Also make sure, through the full range of adjustment, that the fairing and hardware do not hit the gas tank.
2. This is a detachable fairing, ALWAYS make sure the locking mechanism is fully engaged after installing the fairing.
3. The improper installation of this kit and related components could result in serious injury or death.



## CAUTION

1. Memphis Shades Wind Deflectors are made from Lucite® acrylic, and will last for years with proper care. Clean your Wind Deflectors with plenty of soapy water (mild dishwashing liquid is best) and a soft cotton cloth. Use your bare hands to feel and dislodge bugs, or cover with a wet, soapy towel and let it soak. Don't use paper towels and scrape with anything. Small scratches can be removed with NOVUS #2.
2. Never use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."
3. Glass cleansing agents will cause severe damage to your Wind Deflectors, and will void your warranty.



Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

**For Parts and Warranty Help, Contact:**

Memphis Shades, Inc.  
P.O. Box 429  
Rossville, TN 38066  
(901) 853 0293

Visit us on the web at [www.memphisshades.com](http://www.memphisshades.com) or you can also reach us by email: [customerservice@memphisshades.com](mailto:customerservice@memphisshades.com)


## 1. Kit Contents

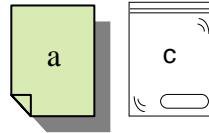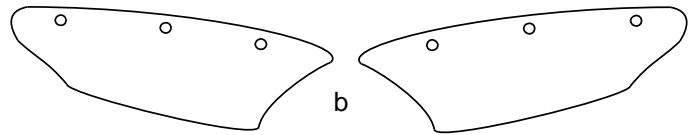

Ref	Part #	Description	Qty
(a)	I7024	Mounting Instructions	1
(b)	M7024	Tinted Fairing Wind Deflectors, Black	2
(c)	K36	Kit bag (For attachment)	1

## 2. Mounting Instructions

1. Remove the six holes plugs from the bottom edge of the Fairing.
2. Align the holes in the Wind Deflector with the holes in the Fairing. The Wind Deflectors are supplied as Right and Left units, and will only fit one side of the Fairing.
3. Starting at the center hole, push the bolt, with the washer, through the Fairing and through the Wind Deflector. Finger tighten the nut onto the bolt.
4. Secure the Wind Deflector with the remaining two bolts, and tighten down all nuts.
5. Fit the remaining Wind Deflector in the same way

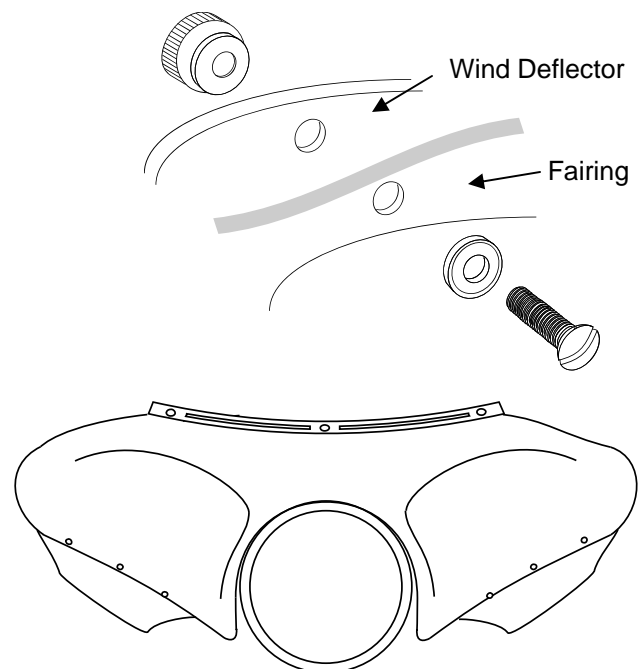

*The Fusion of Style & Function*