



Part No. 2350-0189

MEM7208

### FLH WIND DEFLECTORS - GHOST

**Durable Lucite® construction.  
Stylish and Functional**

Before assembly, read Warnings inside



## WARNING

1. During installation, make sure that the wind deflectors do not come in contact with and damage any part of the motorcycle. Carefully turn the front wheel all the way in both directions making sure that the wind deflectors do not contact the gas tank or lower leg fairings.



## CAUTION

1. Memphis Shades FLH Wind Deflectors are made from Lucite® acrylic, and will last for years with proper care. Clean your wind deflectors with plenty of soapy water (mild dishwashing liquid is best) and a soft cotton cloth. Use your bare hands to feel and dislodge bugs, or cover with a wet, soapy towel and let it soak. Don't use paper towels and scrape with anything. Small scratches can be removed with NOVUS #2.
2. Never use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."
3. Glass cleansing agents will cause severe damage to your wind deflectors, and will void your warranty. For care and cleaning we recommend using **Memphis Shades All Kleer**, a unique cleaner/polish, bug remover and rain repellent that leaves a super slick surface that makes the next cleaning even easier.



Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

**For Parts and Warranty Help, Contact:**

Memphis Shades, Inc.  
P.O. Box 429  
Rossville, TN 38066  
(901) 853 0293

Visit us on the web at [www.memphisshades.com](http://www.memphisshades.com) or you can also reach us by email: [customerservice@memphisshades.com](mailto:customerservice@memphisshades.com)

## 1. Kit Contents

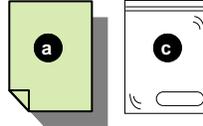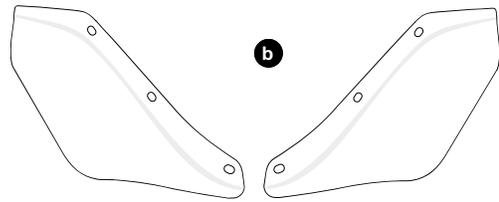


Ref	Code	Description	Qty
<b>a</b>	I7208	Mounting Instructions	1
<b>b</b>	M7208	FLH Wind Deflectors - Ghost	2
<b>c</b>	K65	Kit Bag (For Attachment)	1

## 2. Mounting Instructions

Tools needed : Phillips Screwdriver.


1. Remove the three plastic hole plugs (Fig. 1) from the back edge of the Fairing.

**Fig. 1**

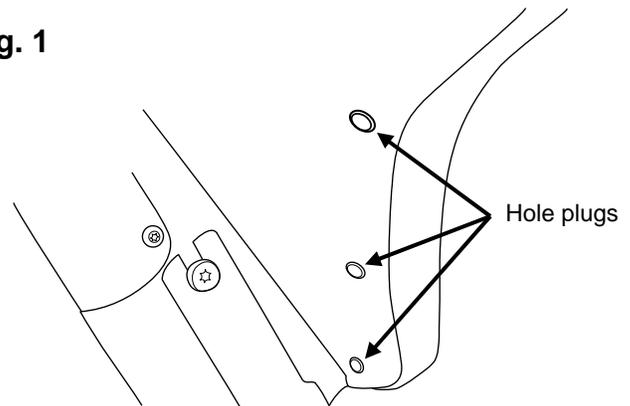

2. Determine which side is left and which is right. The FLH Wind Deflectors will only fit one side of the fairing. (Fig. 2)

**Fig. 2**

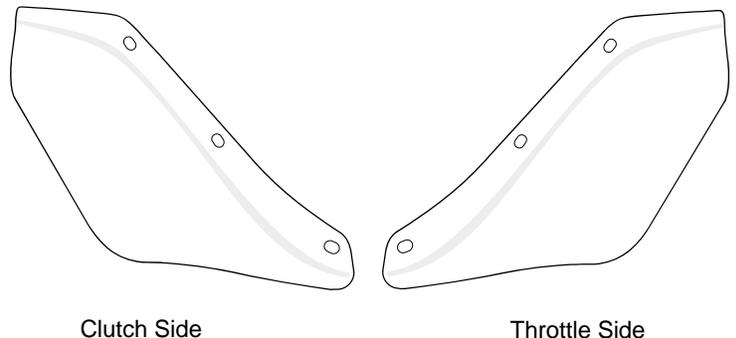


**FLH WIND DEFLECTORS - GHOST**

**Mounting Instructions, continued**

3. Prepare Wind Deflector by: pushing the black stainless steel screw ①, with the finish washer ②, through the Wind Deflector and adding the rubber bushing ③. (Fig. 3) Repeat for all three holes.

**Fig. 3**

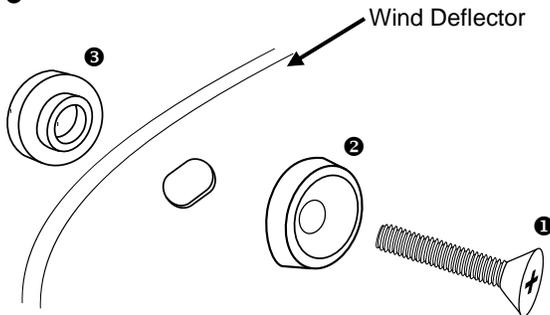

4. Align the Wind Deflector with the holes in the fairing. Starting at the Bottom hole, slightly tighten stainless steel screw to help hold wind deflector in place. Repeat for the remaining two screws. Tighten all three screws snugly. Do not over tighten.

5. Fit the remaining Wind Deflector in the same way.