



Part No. 2321-0163

MEK1931

REVISION 2

Honda VTX 1300 R/S (covered forks) '03 to '09
Bullet FX Fairing
Mounting kit, Polished Aluminum

Before assembly, read Warnings inside



WARNING


1. During installation, make sure that the fairing and hardware do not interfere with any cables or wiring when the forks are turned all the way in either direction. Also make sure, through the full range of adjustment, that the fairing and hardware do not hit the gas tank.
2. This is a detachable fairing, ALWAYS make sure the locking mechanism is fully engaged after installing the fairing.
3. The improper installation of this kit and related components could result in serious injury or death.



CAUTION

1. Memphis Shades fairings are made from Lucite® acrylic, and will last for years with proper care. Clean your fairing with plenty of soapy water (mild dishwashing liquid is best) and a soft cotton cloth. Use your bare hands to feel and dislodge bugs, or cover with a wet, soapy towel and let it soak. Don't use paper towels and scrape with anything. Small scratches can be removed with NOVUS #2.
2. Never use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."
3. Glass cleansing agents will cause severe damage to your fairing, and will void your warranty.
4. At certain times of the day the Sunlight can reflect off the curvature of a fairing and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or adjust the fairing to avoid reflections.

1. Kit Contents

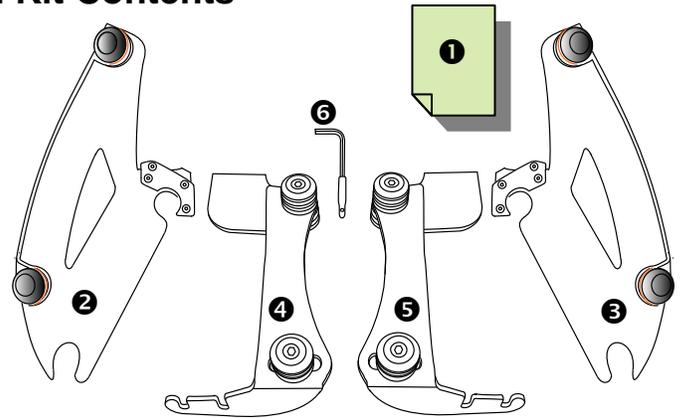

Ref	Code	Description	Qty
①	I1931	Mounting Instructions	1
②	M1394	Clutch side mounting plate assembly	1
③	M1395	Throttle side mounting plate assembly	1
④	M1399	Clutch side mounting bracket assembly	1
⑤	M1398	Throttle side mounting bracket assembly	1
⑥	M310	3/16" Short arm allen wrench	1

2. Mounting Instructions

Additional tools required that are not included in this kit. 12mm, 8mm Wrench, or 1/4 socket and ratchet. 7/16" or 11mm wrench for plate installation.

1. Cover gas tank and front fender with towels to avoid damage during installation.

2. Install the Mounting plate assemblies ② and ③ onto the fairing, using the bolts that are pre-assembled on the Mounting plate assemblies.

The Santoprene grommets should be inserted through the holes in the fairing so that the flat round part of the grommet lies flat on each side of the plastic. Tabs point out towards the edge of the fairing. (Fig. 1)

3. On the throttle side, locate and loosen, almost to the point of removal, the two 8mm hex head bolts on top of the lower triple tree that secures the chrome fork cover. Locate the cable holder mounted under the upper triple tree. (See Fig. 2) Using a 12mm wrench, remove the cable holder bolt but hold the cable holder in place while slipping the Throttle side mounting bracket assembly ⑤ slots onto the 8mm Hex Head Bolts. Slip the Throttle side mounting bracket assembly on to the cable holder so that the cable holder is between the mounting bracket and the upper triple tree, make sure that the cable holder's locator tab is inserted in the locator hole.

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

For Parts and Warranty Help, Contact:

Memphis Shades, Inc.

P.O. Box 429

Rossville, TN 38066

(901) 853 0293

Visit us on the web at www.memphisshades.com or you can also reach us by email:

customerservice@memphisshades.com

Honda VTX 1300 R/S (covered forks) '03 to '09
Bullet FX Fairing
Mounting kit, Polished Aluminum

2. Mounting Instructions, continued

4. Push the Throttle side mounting bracket assembly all the way towards the chrome fork covers and loosely tighten the two lower bolts. Tighten these bolts after the fairing is in place (Fig. 2)

5. Repeat these steps for the Clutch side, using the Clutch side mounting bracket assembly ④

6. Install the fairing by placing the lower slots into the lower mounting bushings. Slip the upper slots into the upper mounting bushings and gently but firmly seat the slots into place. (Fig 3). Lock the locking mechanism into place. (Fig 4)

7. Tighten the upper and lower mounting bolts from steps 3 and 4.

8. Adjust the height, angle and alignment of the fairing and tighten ALL bolts.

Note: This is a detachable fairing, ALWAYS make sure the Locking Mechanism is Fully Engaged after installing the fairing!

Fig. 1

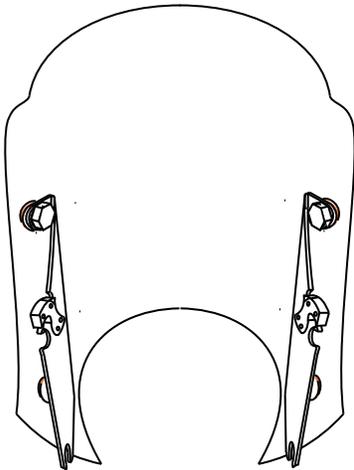


Fig. 2



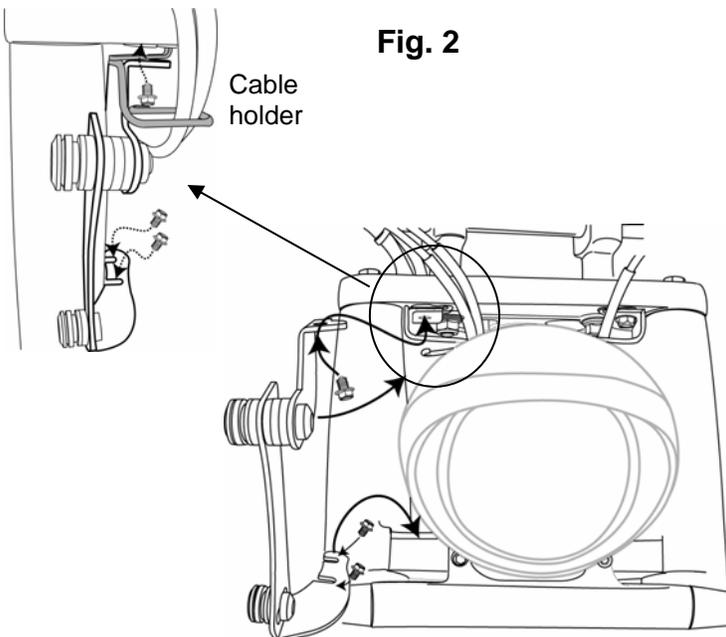


Fig. 3

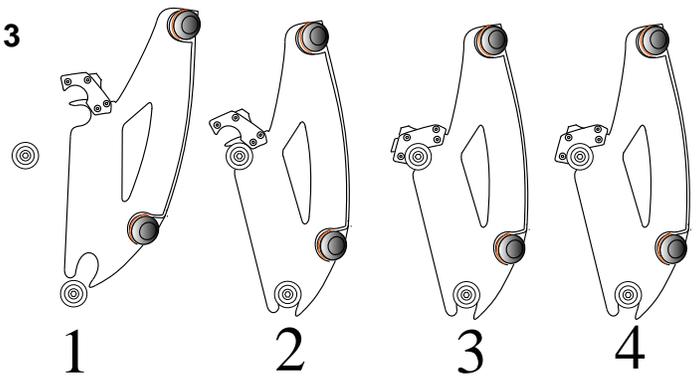

1. Place lower slot into lower bushing.
2. Rotate top slot into place.
3. Open trigger and rotate over bushing
4. Release trigger and make ensure it closes over the bushing.

Fig. 4

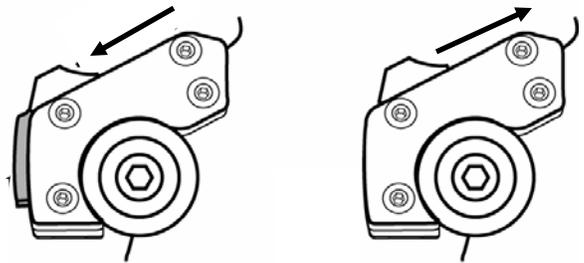

Push the trigger forward to open

Release the trigger and push backward to close