

MEM-9892
STANDARD INDEPENDENT LOWERS HARDWARE KIT FOR
COVERED FORKS

TOOLS REQUIRED: 3/16" Allen wrench (provided)

1. Cover the front fender with a towel, in case you drop something.
2. Attach the lowers plastic to the lowers mounting plates using the pre-assembled bolts and button nuts. Install the components in the order shown in **Figure 1**.

Note: The neoprene washer has been replaced by four santoprene grommets. The rubber grommets should be inserted through the holes in the windshield so that the flat round part of the grommet lays flat on each side of the windshield.

3. The mounting plate tabs should point away from each other when installed correctly. (see **Figure 2**)

Note: The mounting plates can be mounted pointing up, for those applications where the windshield is too short to reach them other wise

4. Protective tape has been applied to the inside of the clamps. Loosely install the two fork clamps onto the fork covers. MAKE SURE THE LOWERS WILL CLEAR ALL FENDERS, RADIATORS, OIL COOLERS AND TURN SIGNALS WHEN INSTALLED. Attach the lowers mounting plates to the fork clamps. Adjust height, angle and position of the clamps and then tighten them.

Fig. 1 Order of assembly


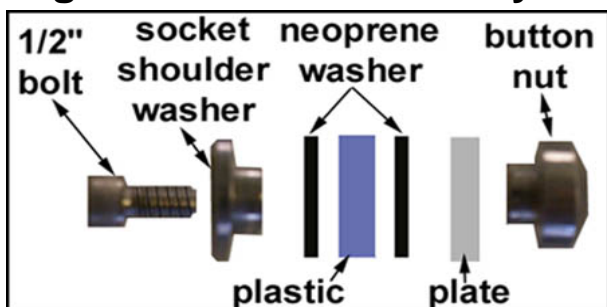


Fig.2 Position of plate tabs

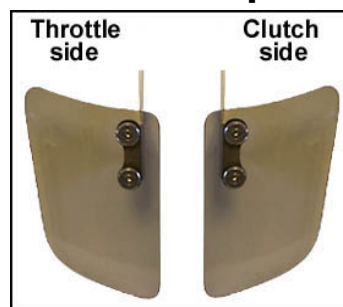

CARE AND CLEANING

To clean your windshield, wash it with warm water and a mild, non-abrasive, dishwashing liquid. Use a soft cloth such as a T-shirt or flannel cloth.

To protect your windshield, use NOVUS #2 to remove minor scratches, or use Memphis Shades Shinola polish specially designed for plastic. NEVER use glass cleansing agents, they may cause severe damage to your windshield.

Never use any petroleum-based chemicals, or cleaning agents with ammonia.

MEM9892 MOUNTING KIT
STANDARD INDEPENDENT LOWERS FOR COVERED FORKS

PART #	DESCRIPTION	QTY.
M892	INSTRUCTION SHEET /PARTS LIST	1
S1076	LOWERS MOUNTING BRACKET LEFT SUB-ASSEMBLY	1
S1077	LOWERS MOUNTING BRACKET RIGHT SUB-ASSEMBLY	1
S1107	EXTRA-LGE ADJ. FORK CLAMP FOR COV.FORKS W/TAPE	2
M375	P/S ADHESIVE TAPE	2
M313	3/16" ALLEN WRENCH HOLDER (CAP)	1
M310	3/16" SHORT ARM ALLEN WRENCH	1

**Memphis Shades warrants all product components, metal and plastic,
against defects in materials and workmanship for 24 months.**

FOR PARTS AND WARRANTY HELP, CONTACT:

MEMPHIS SHADES
P. O. Box 429
Rossville, TN 38066
(901) 853-0293

Visit us on the web at www.memphisshades.com or
you can also reach us at
customerservice@memphisshades.com

MEM9892 12-06-07