

**2321-0023**  
**HONDA VTX1300 C (open forks)**  
**MOUNTING INSTRUCTIONS FOR LOWER HARDWARE KIT**  
**Mounts to existing Memphis Shades Windshield Fork Clamp**


**TOOLS REQUIRED:** 3/16 Allen Wrench (provided)

1. Cover the front fender with a towel, in case you drop something.
2. Attach the lowers plastic to the lowers mounting brackets using the pre-assembled bolts and button nuts. Install the components in the order shown in **Figure 1**.


**Note:** The neoprene washers have been replaced by santoprene grommets. The santoprene grommets should be inserted through the holes in the plastic so that the flat round part of the grommet lies flat on each side of the plastic.

3. The mounting bracket tabs should point away from each other when installed correctly. (see **Figure 2**)

**Fig. 1 Order of assembly**

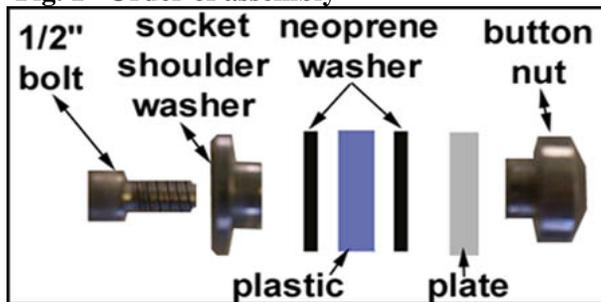

**Fig.2 Position of plate tabs**

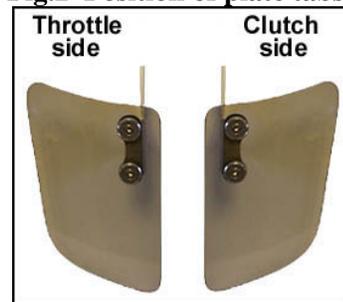

4. The Lowers Bracket attaches to an existing Memphis Shades Windshield Fork Clamp. If you have not yet installed your Memphis Shades Windshield then install it now including tightening all bolts. The purpose of this is to properly position the fork clamps. After the Windshield is completely installed proceed to next step.
5. Loosen all four plate to fork clamp bolts and remove windshield with mounting plates attached. The Fork Clamps should still be attached to the forks. Carefully set windshield aside and proceed to next step.
6. The four plate to fork clamp bolts have a beveled socket washer and a 1/8" spacer. Remove the 1/8" spacer from the two LOWER fork clamps only. Then install the new Lowers bracket on the fork clamp with the bolt and beveled socket washer. Keep the 1/8" spacers as they will be needed if you choose to remove the lowers bracket. If you remove the lowers bracket and install the bolt without the 1/8" spacer the bolt will go all the way through the fork clamp and may damage the fork surface.
7. Now loosen the bolt holding the new lowers bracket and re-install the windshield and tighten ALL bolts.

**2321-0023**  
**HONDA VTX1300 C (open forks)**  
**PARTS LIST FOR LOWERS HARDWARE KIT**

<b>PART #</b>	<b>DESCRIPTION</b>	<b>QTY.</b>
<b>M9897</b>	<b>INSTRUCTION SHEET /PARTS LIST</b>	<b>1</b>
<b>S1158</b>	<b>LOWERS MOUNTING BRACKETLEFT SUB-ASSEMBLY</b>	<b>1</b>
<b>S1159</b>	<b>LOWERS MOUNTING BRACKETRIGHT SUB-ASSEMBLY</b>	<b>1</b>
<b>M313</b>	<b>3/16" ALLEN WRENCH HOLDER (CAP)</b>	<b>1</b>
<b>M310</b>	<b>3/16" SHORT ARM ALLEN WRENCH</b>	<b>1</b>

**Memphis Shades warrants all product components, metal and plastic,  
against defects in materials and workmanship for 24 months.**

**FOR PARTS AND WARRANTY HELP, CONTACT:**

**MEMPHIS SHADES**

P.O. Box 429

Rossville, TN 38066

(901) 853-0293

Visit us on the web at [www.memphisshades.com](http://www.memphisshades.com) or

you can also reach us at

[customerservice@memphisshades.com](mailto:customerservice@memphisshades.com)