


MOUNTING KIT MEM-9901
SANTA CRUZ, SANTA CRUZ – CROPTOP
VERA CRUZ, SANTA FE, ROADMASTER, MEMPHIS FLYER

Cover the tank and fender with towels to prevent damage during installation.

1. Loosely attach the four, rod collar assemblies to the windshield using the santoprene grommets. The rubber grommet should be inserted through the holes in the windshield so that the grommet lays flat on each side of the windshield. (See Figure 1.1 & 1.2)
2. Insert the short ends of the “L” rods into the upper rod collars and hold the windshield up in the desired position. Move the rods around until they intersect the handlebars and clamps. (In some cases you may want to use the other rods, as they are interchangeable).
3. Loosely mount the handlebar clamps (on 7/8” bars, use the sizing bands provided). (See Figure 2)
4. Slip the upper mounting rods into the rod holders on the handlebar clamps.
5. Loosely install lower fork clamps with the rod collars facing out. (See Figure 3) Slip the lower rods into the rod collars.
6. While everything is still loose, carefully check tank clearance, shield height/angle and alignment to make sure nothing is in a bind. Tighten everything.

NEVER RIDE WITH ANY PART OF THE MOUNTING HARDWARE MISSING OR LOOSE.

Fig. 1.1 L-side rod collars Fig. 1.2 R-side rod collars Fig. 2 clamp mounted on bars Fig. 3 clamp shown on fork

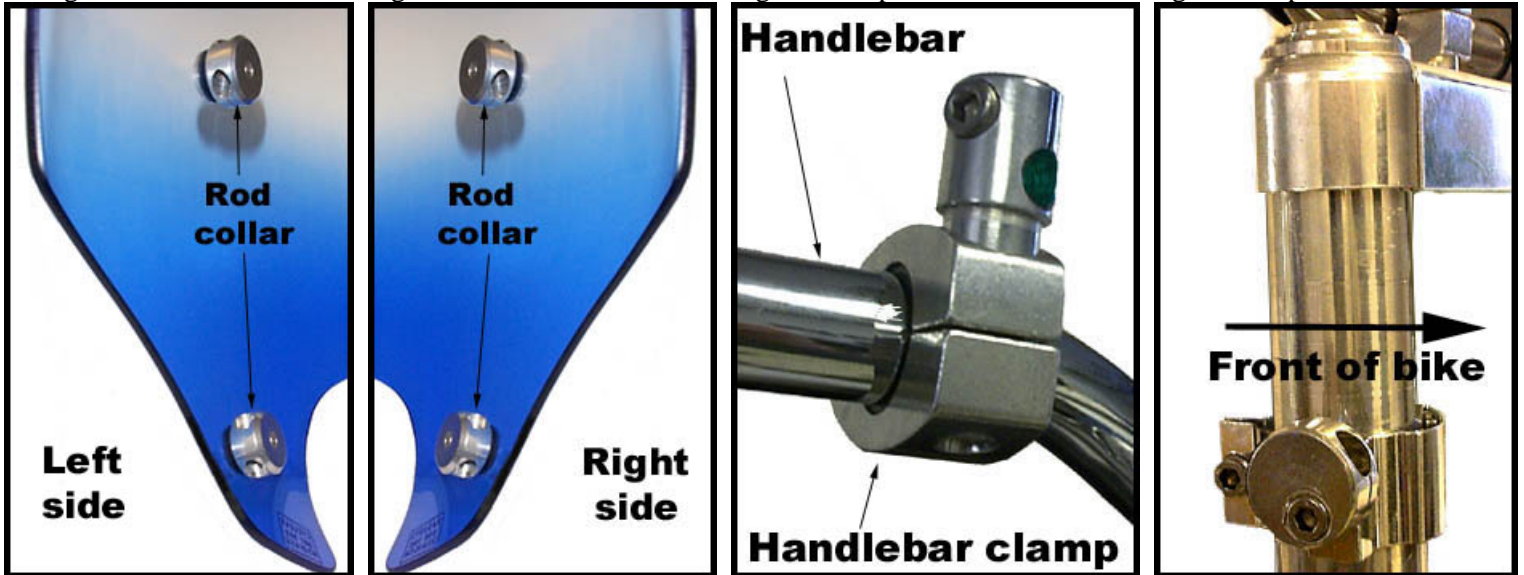

CARE AND CLEANING

To clean your windshield, wash it with warm water and a mild, non-abrasive, dishwashing liquid. Use a soft cloth such as a T-shirt or flannel cloth.

To protect your windshield, use NOVUS #2 to remove minor scratches, or use polish specially designed for plastic. NEVER use glass cleansing agents, they may cause severe damage to your windshield.

Never use any petroleum-based chemicals, or cleaning agents with ammonia. This includes Rain-X, brake fluid, acetone and gasoline.

**MEM-9901 MOUNTING KIT
SANTA FE, SANTA CRUZ, SANTA CRUZ CROP TOP
VERA CRUZ, ROADMASTER, MEMPHIS FLYER**

PART#	DESCRIPTION	QTY.
M901	MOUNTING INSTRUCTIONS/PARTS LIST	1
M504	SOCKET SHOULDER WASHER	4
M543	SANTOPRENE GROMMET	4
M509	CENTER THREADED ROD COLLAR	4
M553	“L” ROD	2
M554	ANGLE ROD	2
M508	OFFSET SOCKET ROD COLLAR	2
M302	1/4” – 20 X 1/2” SS SOCKET HEAD CAP SCREW	6
M520	INNER ADJ. FORK CLAMP HALF	2
M521	OUTER ADJ. FORK CLAMP HALF	2
M525	TOP HANDLEBAR CLAMP HALF	2
M526	BOTTOM HANDLEBAR CLAMP HALF	2
M503	ROD HOLDER	2
M303	1/4” – 20 X 3/4” SS SOCKET HEAD CAP SCREW	6
M346	1/4” – 20 X 1-1/8” SS SOCKET HEAD CAP SCREW	2
M545	7/8” TO 1” HANDLEBAR SIZING BAND	2
M313	3/16" ALLEN WRENCH COVER	1
M310	3/16” SHORT ARM ALLEN WRENCH	1

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

FOR PARTS AND WARRANTY HELP, CONTACT:

MEMPHIS SHADES

P.O. Box 429

Rossville, TN 38066

(901) 853-0293

Visit us on the web at www.memphisshades.com or

you can also reach us at

customerservice@memphisshades.com